

 


CREATOR


20003




LEGO BrickMaster

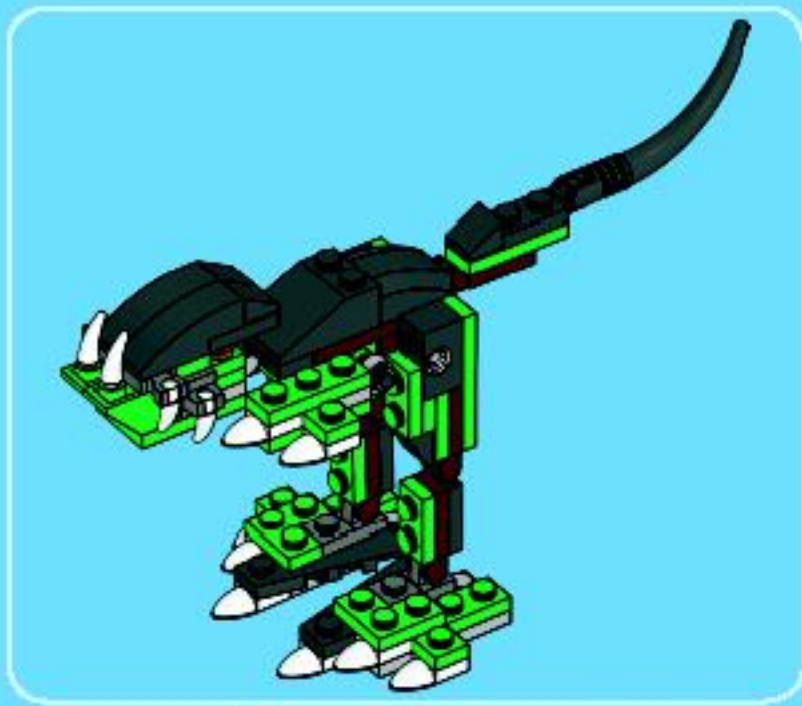


1

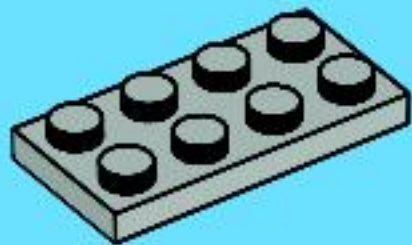 


2

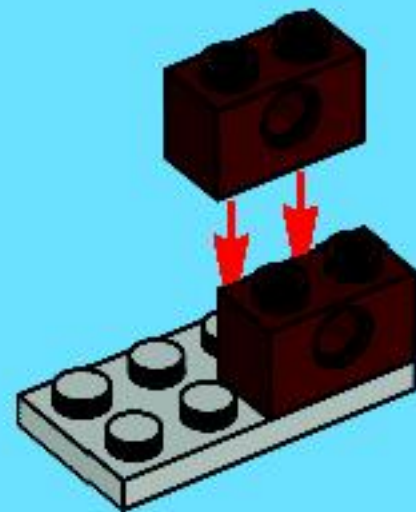 


3

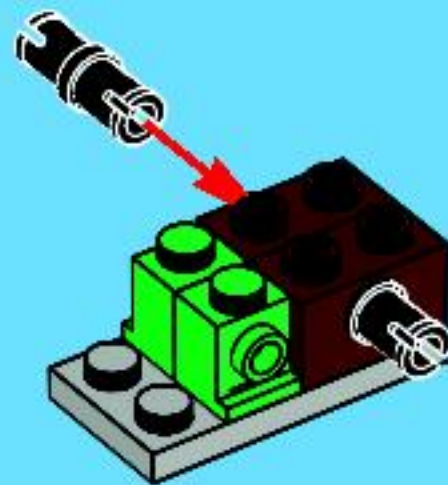 


4

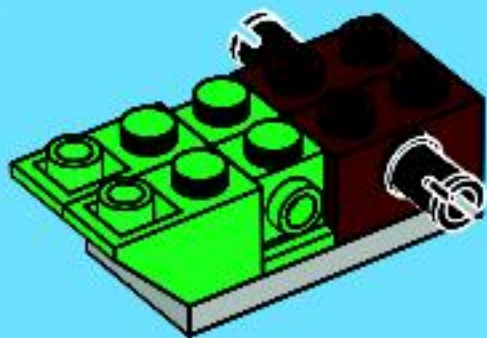 


5

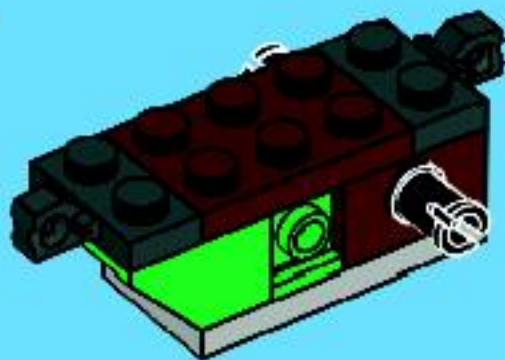 

6

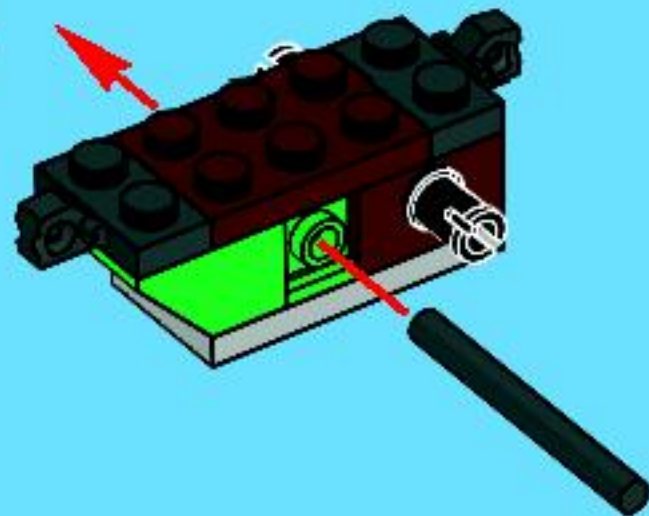 


7

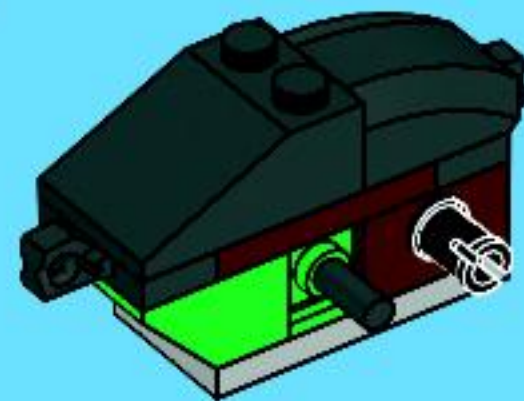 





1

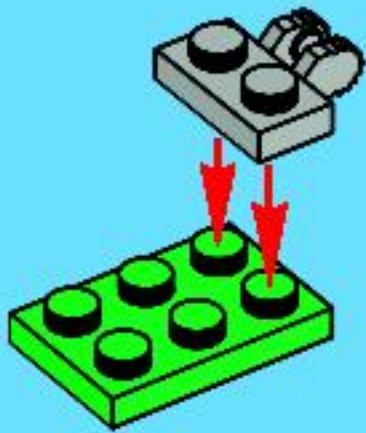 


2

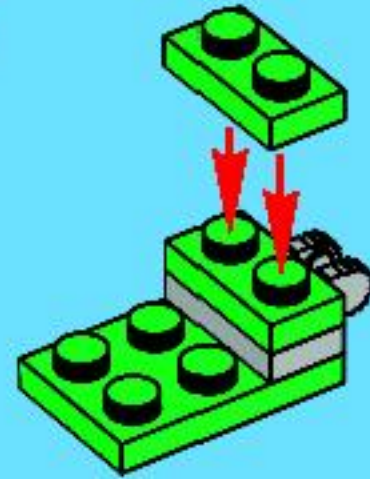 


3

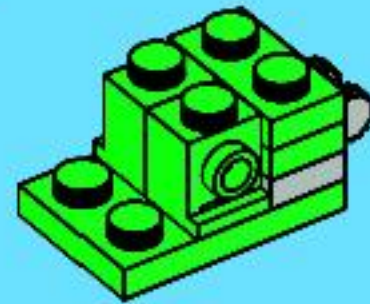 


4

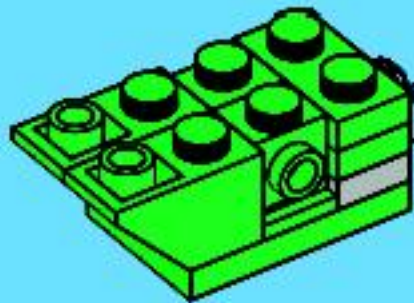 


5

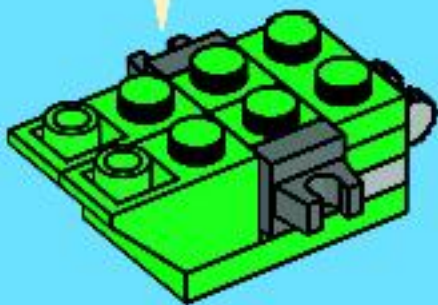 


6

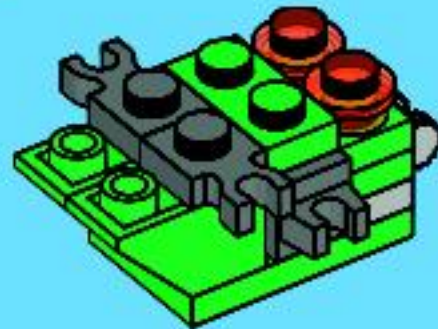 


7

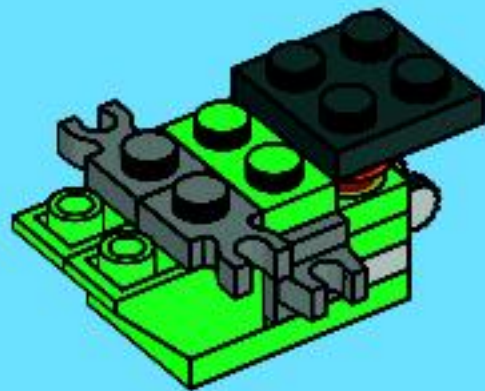 


8

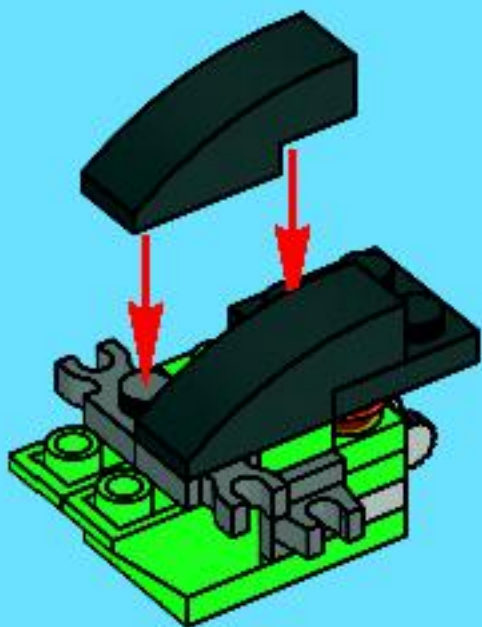 


9

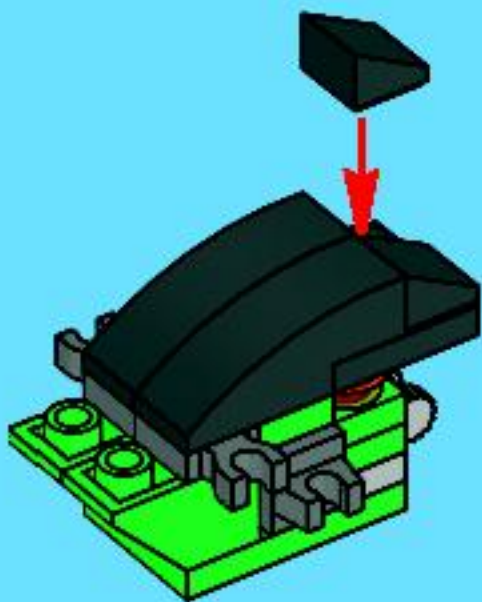 


10

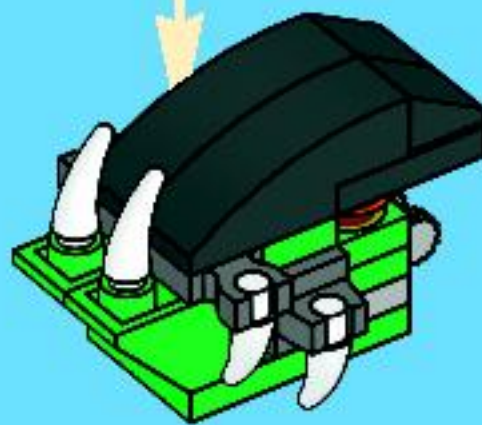 


11

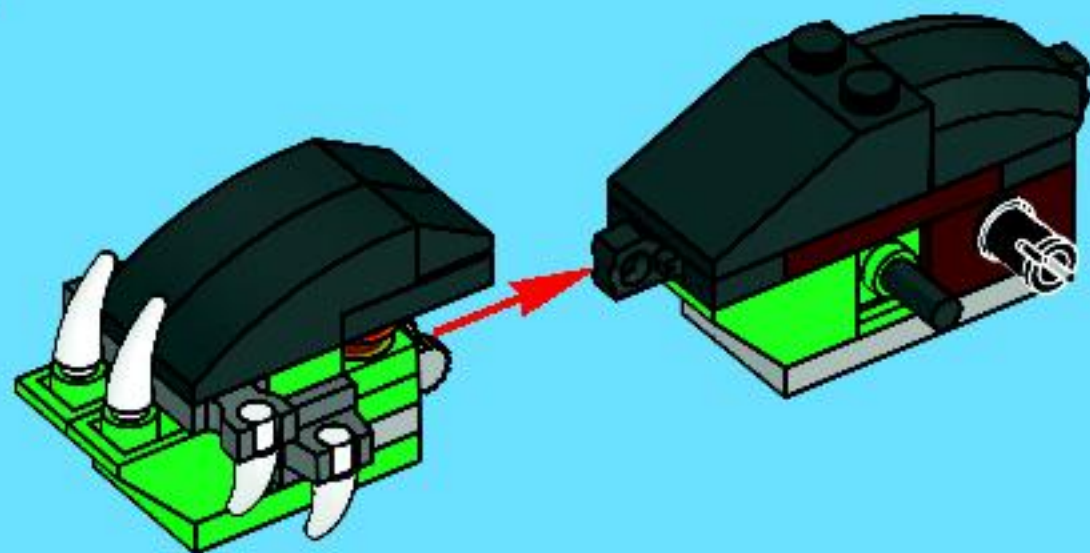 


1

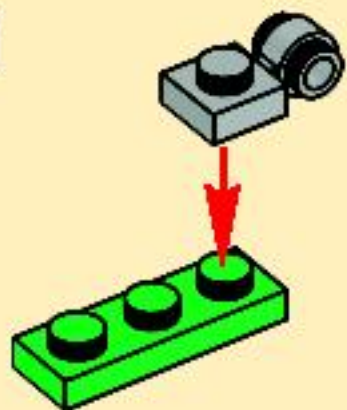 


2

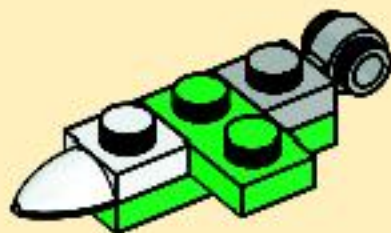 


3

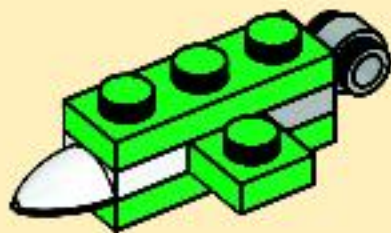 


4

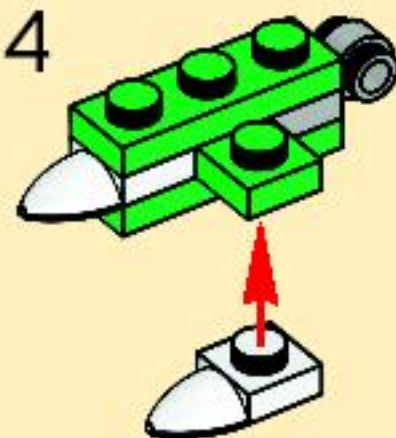 


12

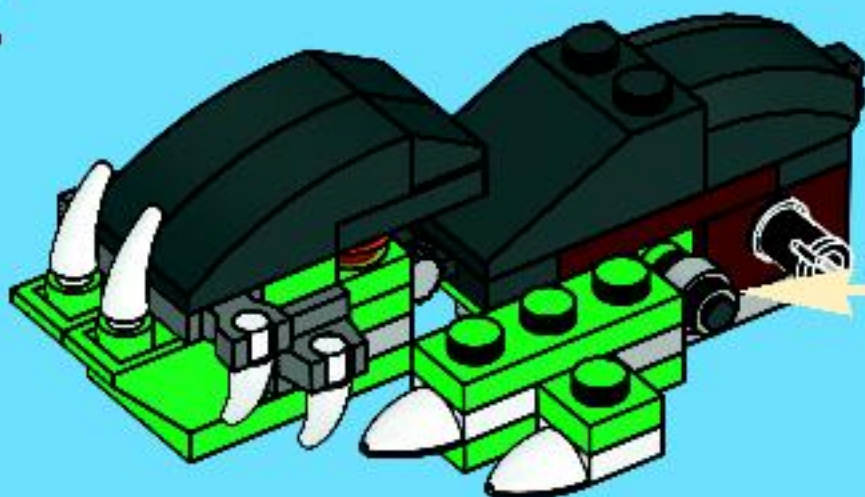 


1

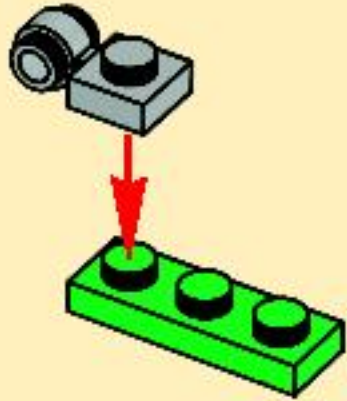 


2

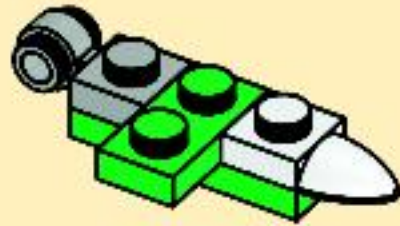 


3

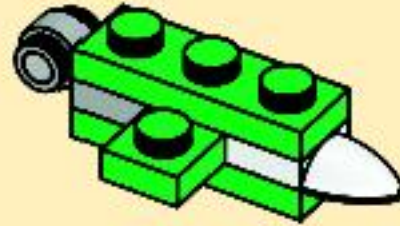 


4

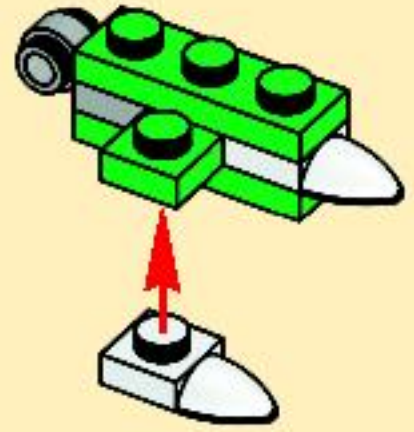 


13

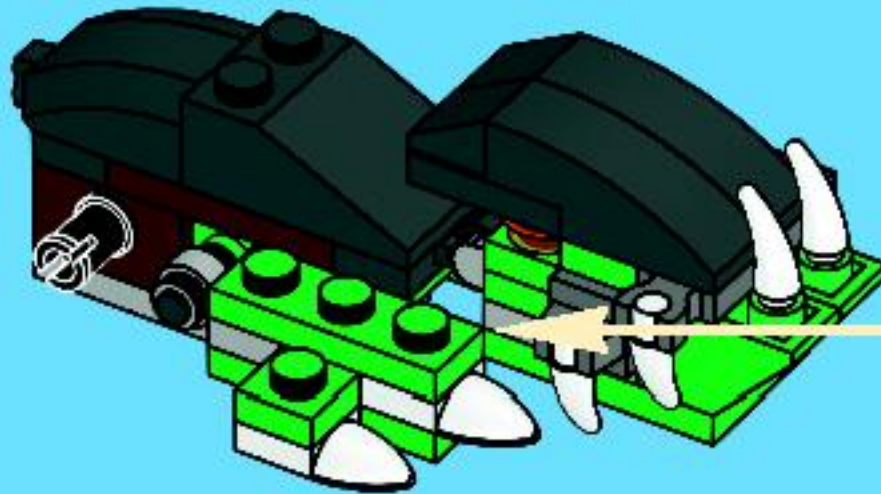 


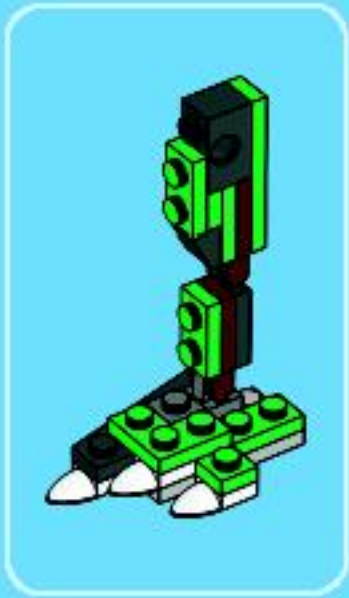 


1

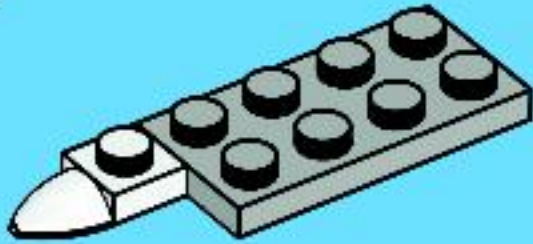 


2

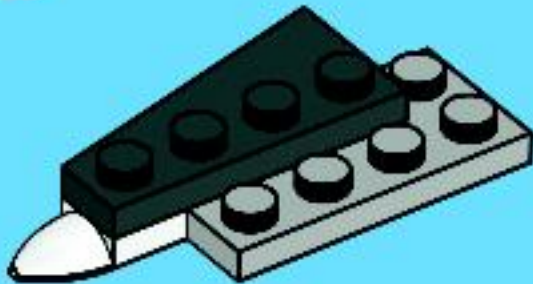 


3

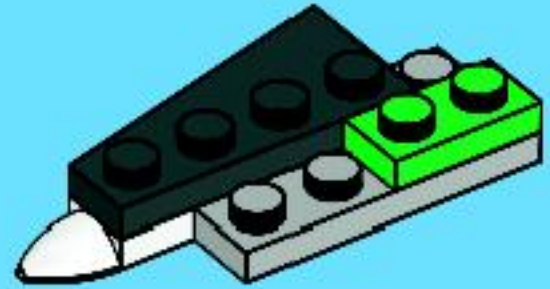 


4

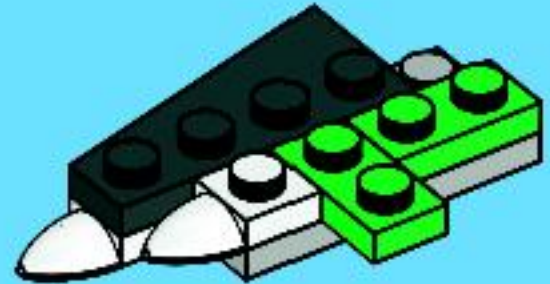 

5

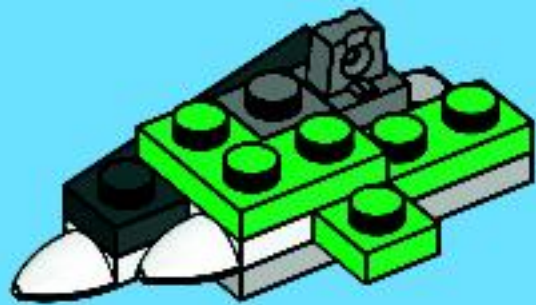 

6

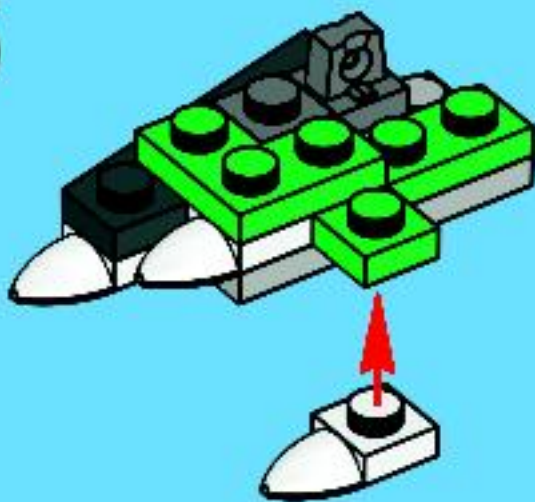 


1




2



 
7

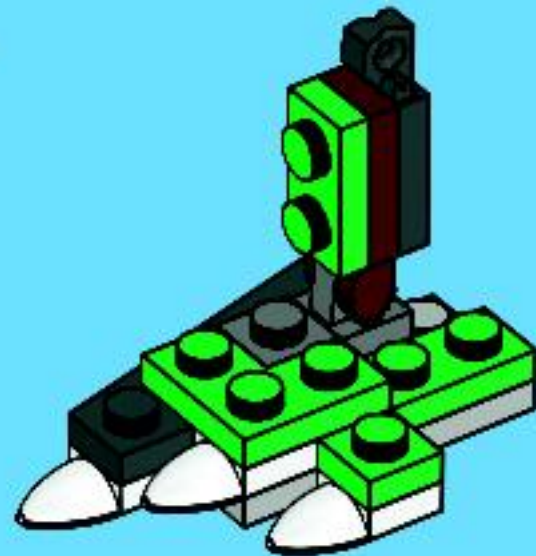

1

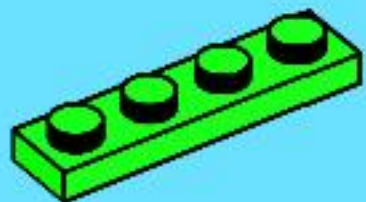 


2

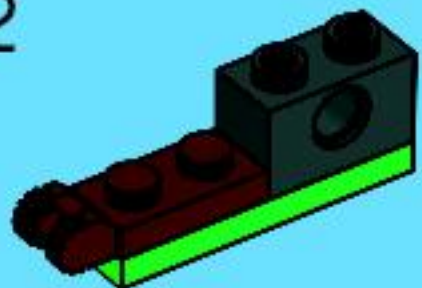 

12

 
3

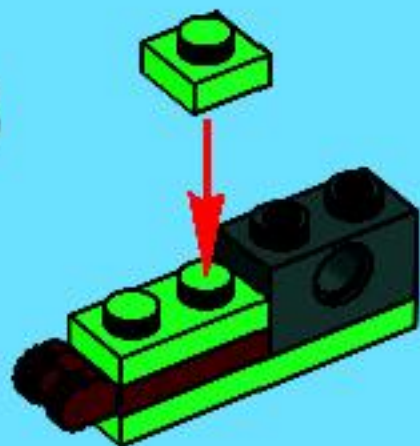


4




 8

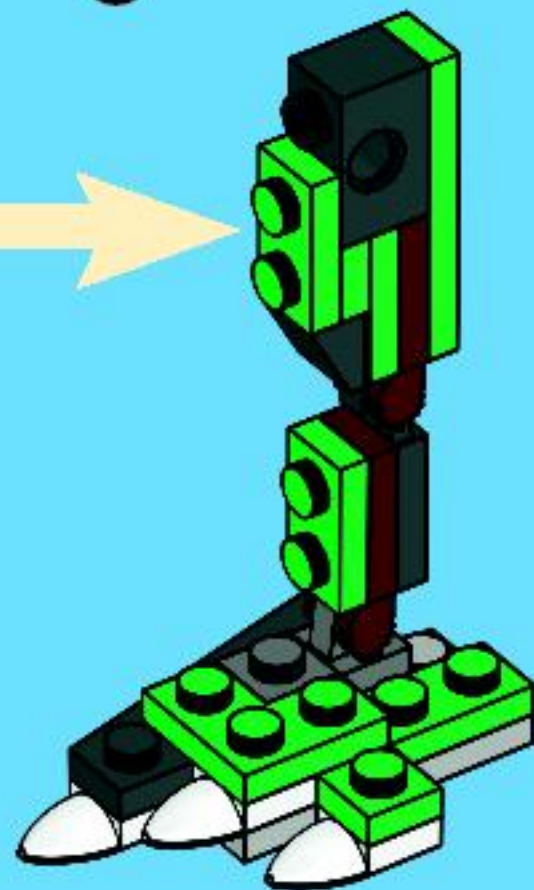


9

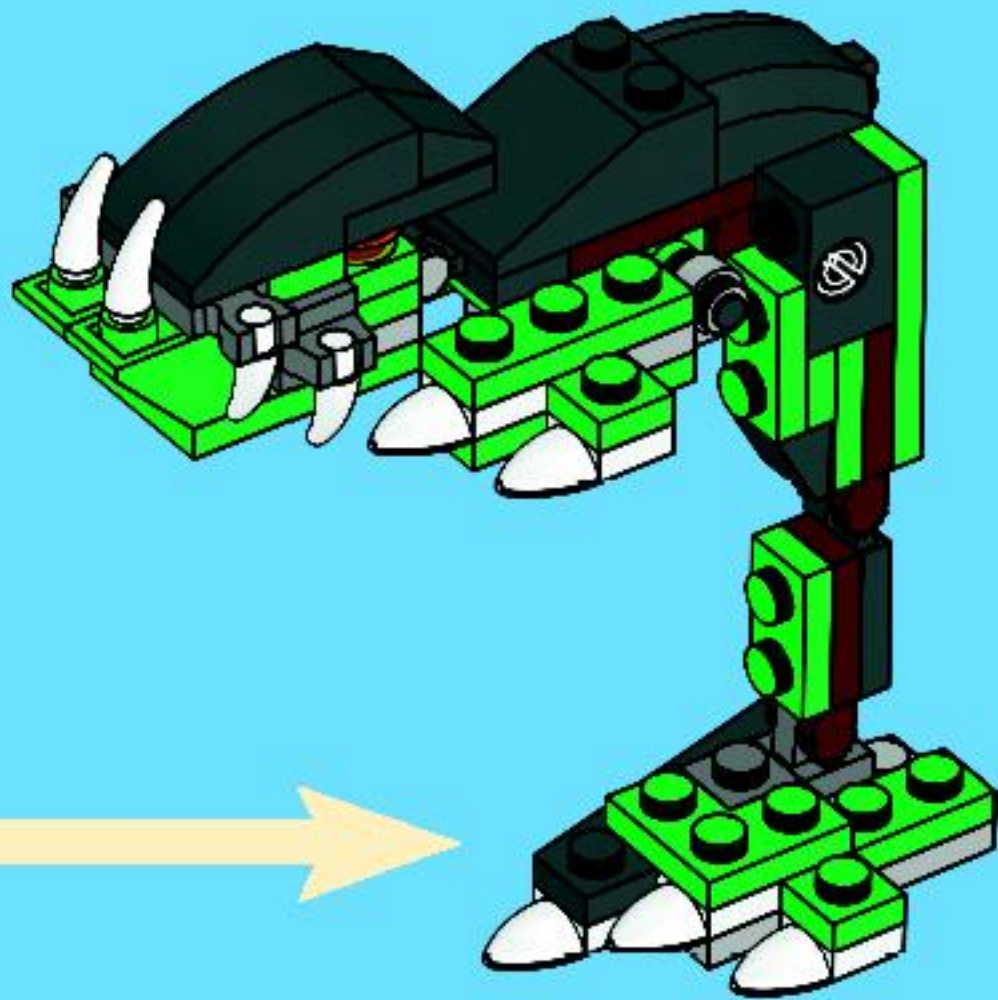 


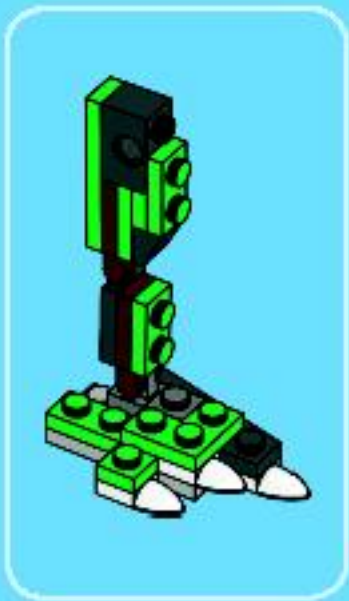 


1

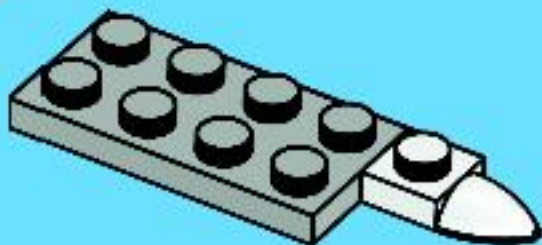 

2

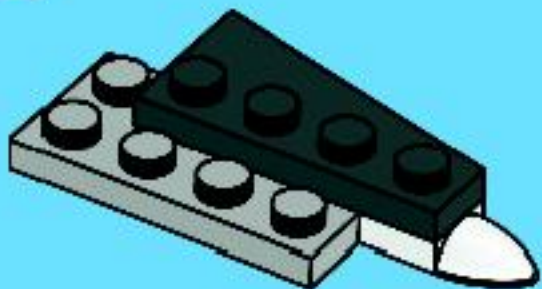 


3

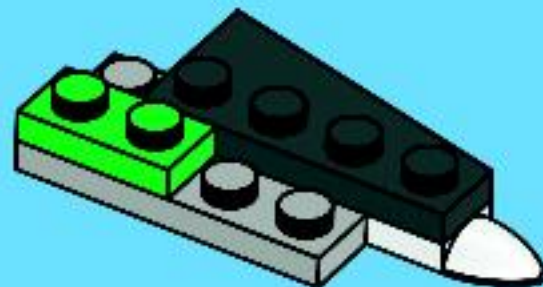 


4



 
5

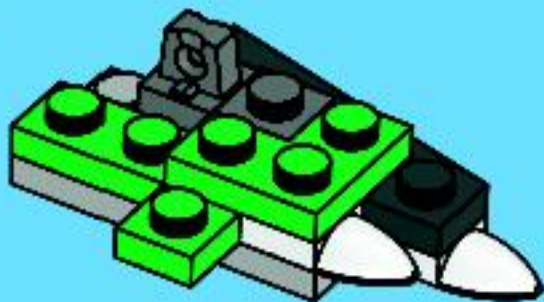

6

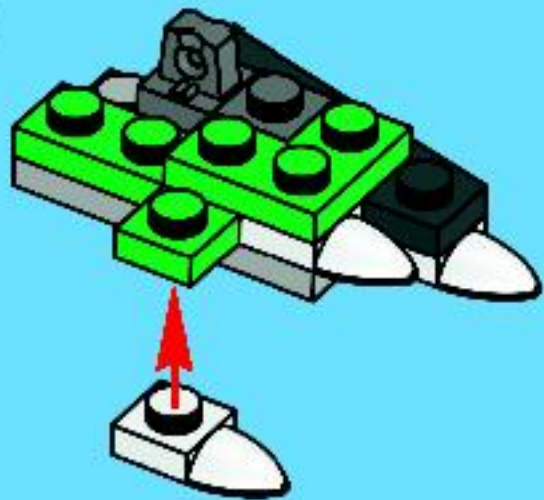 


1

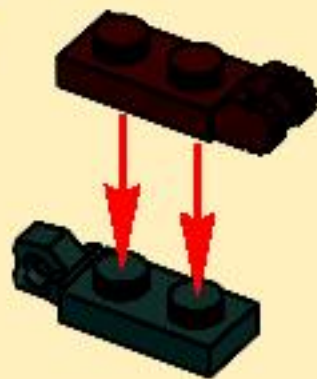 


2



 
7

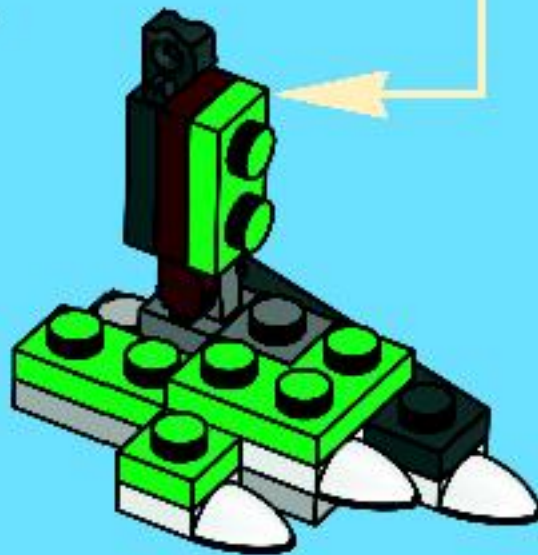


1

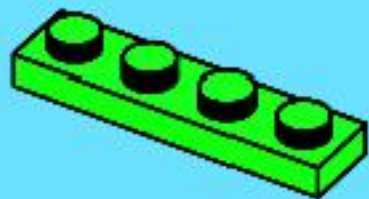 

2

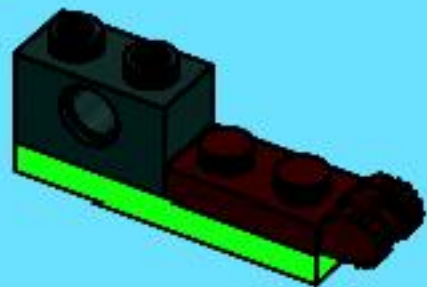 


3

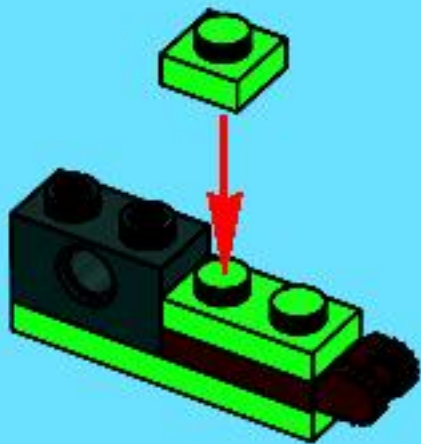 


4



 8

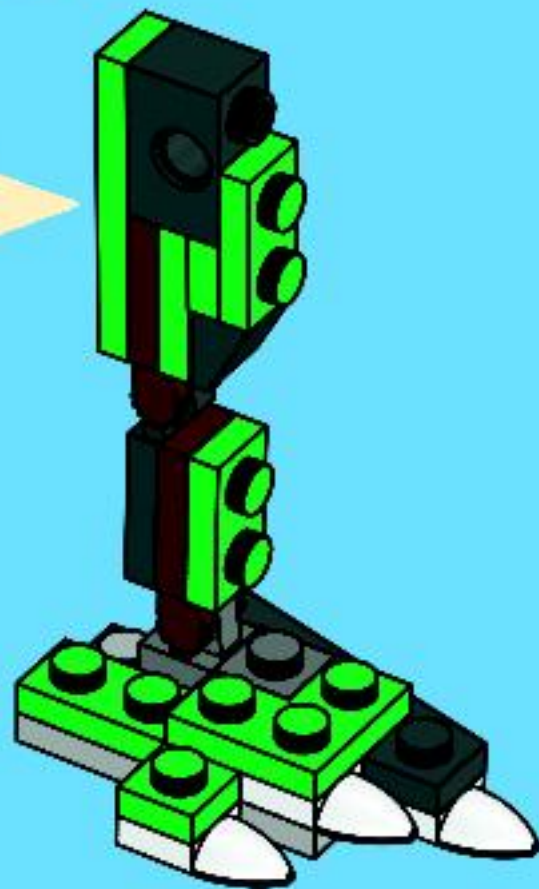


9

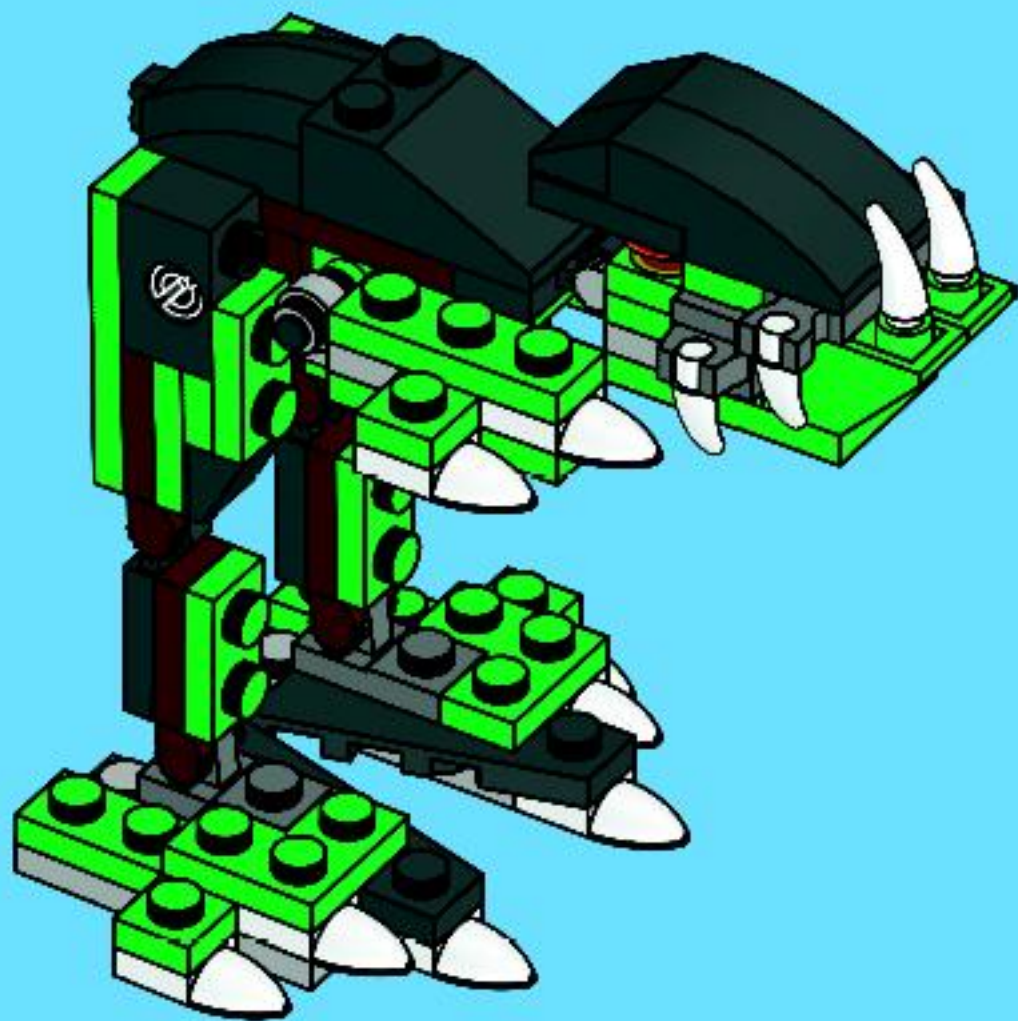 


1



 
2

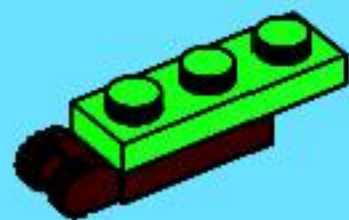


3

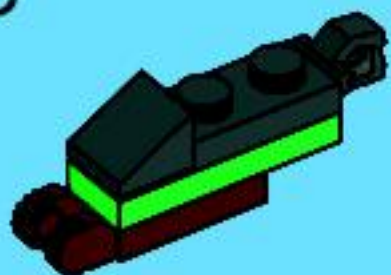 

4

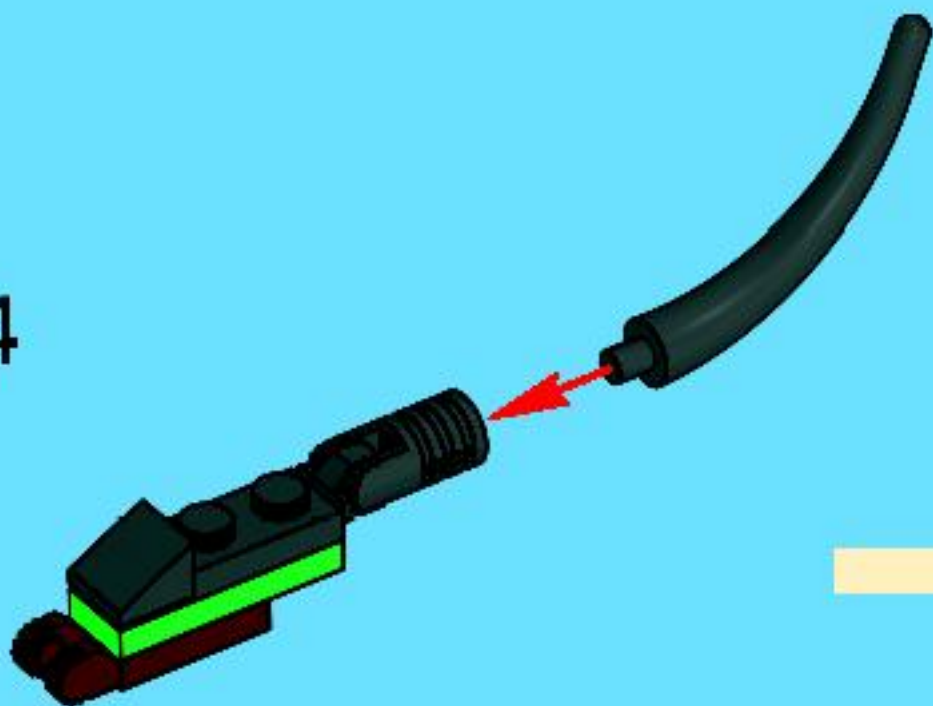 

10

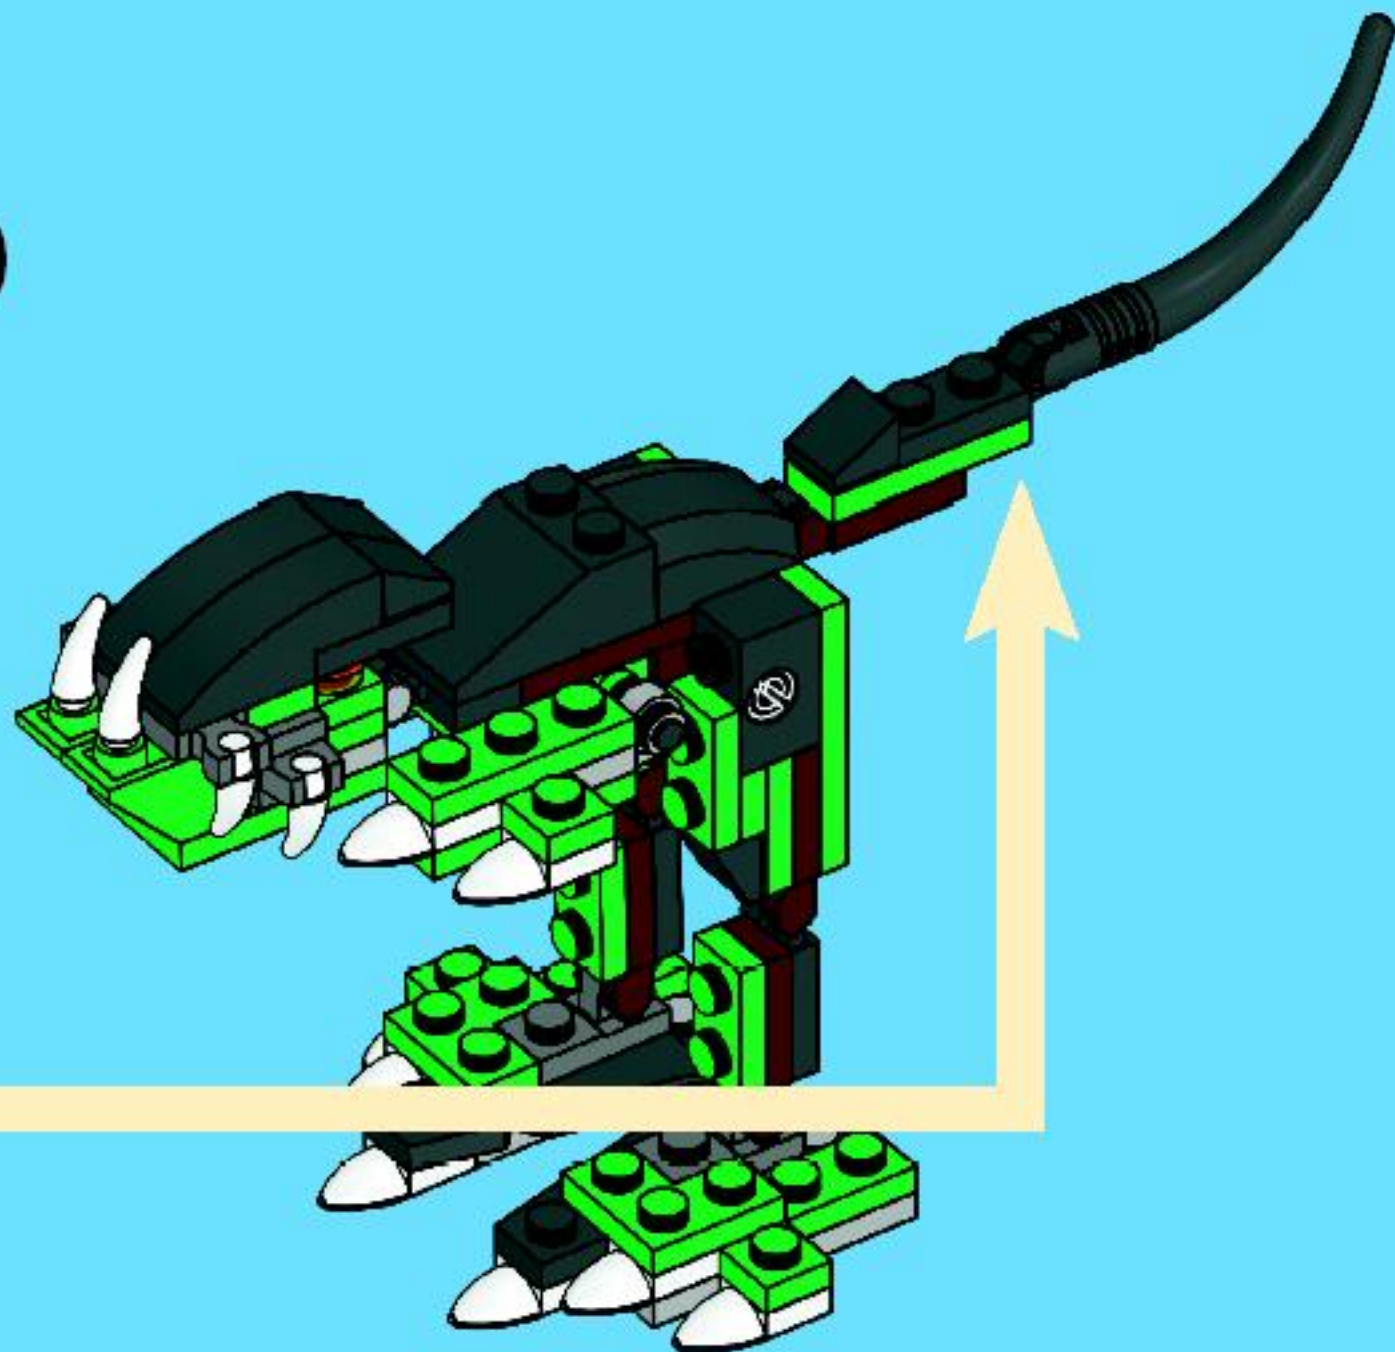 

6x
4273397

10x
4224792

2x
3005747

2x
4121715

5x
4521427

1x
4211189

2x
4211252

1x
4143372

1x
4140303

2x
4185620

4x
4183043

2x
302226

1x
4508453

2x
4251161

2x
4161332

2x
4160869

5x
4504382

1x
329826

2x
370026

1x
4143875

2x
4210632

2x
4211069

2x
4210726

5x
4107758

2x
371028

1x
366628

1x
302128

2x
4211477

1x
4515341

3x
4211395

4x
4142989

4x
4187334

2x
4157120

2x
302428

15x
302328



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

www.lego.com/service or dial



00800 5346 5555 :



1-800-422-5346 :

