



CREATOR

31001



3 IN 1



31003



31005



31006



1



2

 
2





3



4

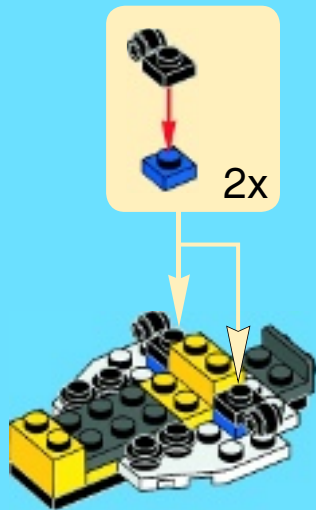


5

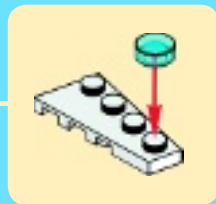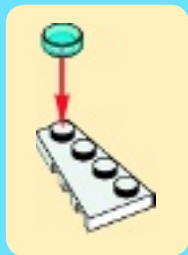  

6



 7

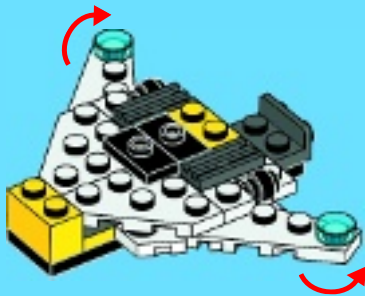


8



6



 1

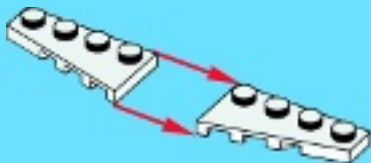

2



3



4



5



6



 
1



2



7

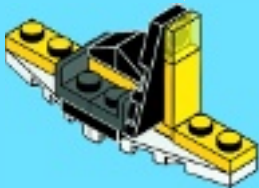

8

1



2



 
8



9



9

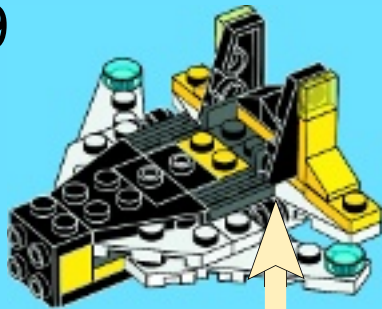

9

10



10

1



 
2



11



12

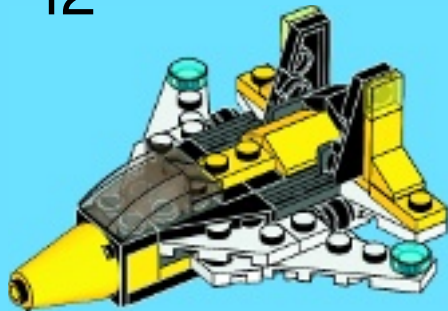

13



2x



1



 
 
 
2




3



4

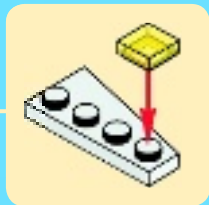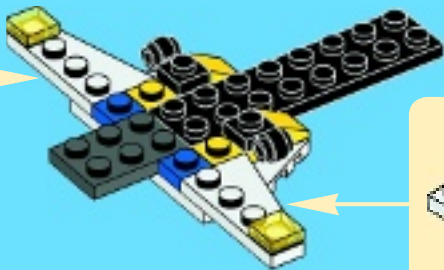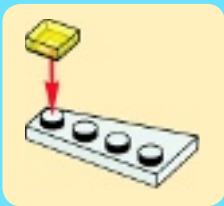


5

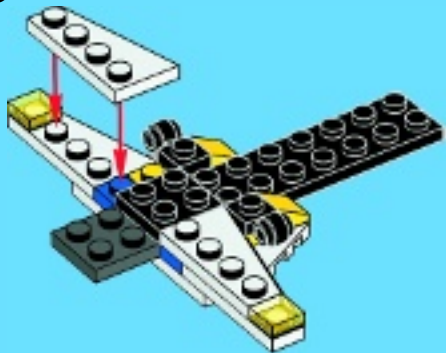 


6



 
7

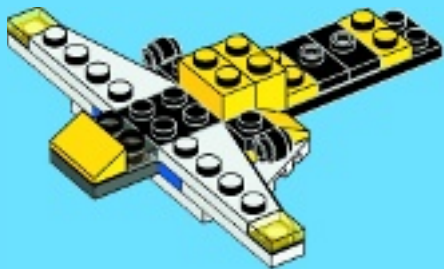


8

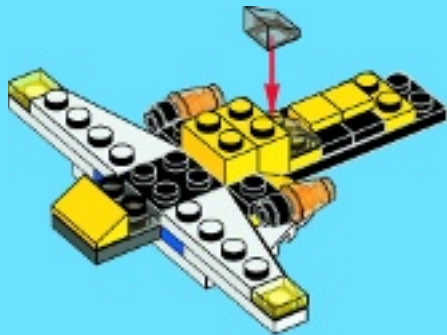 

9

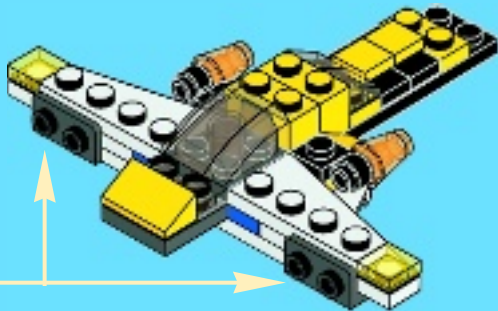 

10

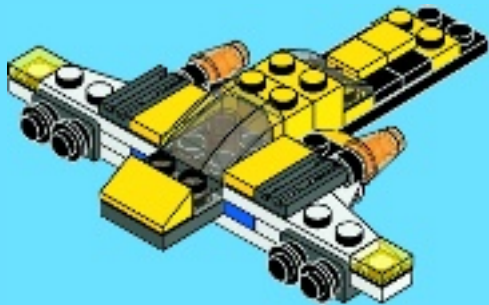 

1



 
2



3



11

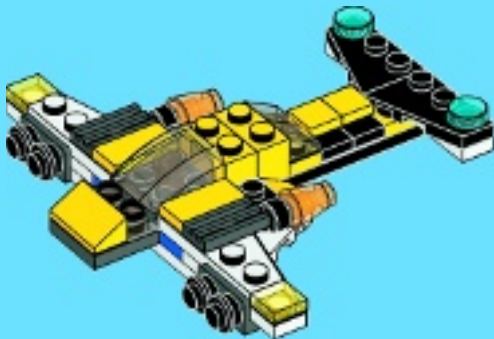




1



2



 3

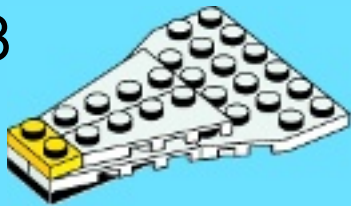

4



5



6



7



8



1



 
2



3



9

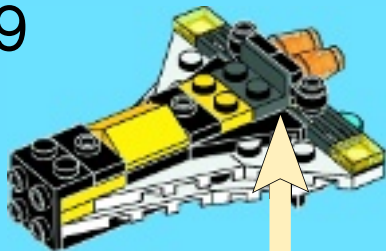

10





2x
300424



1x
6022159



2x
4504381



2x
4550348



6x
302324



2x
307024



2x
306924



2x
302423



1x
4211043



2x
4210631



3x
6000606



2x
4567338



2x
4646861



2x
3003944



2x
4244368



1x
6001197



1x
4217722



2x
4211525



2x
4160857



2x
4161326



2x
245001



1x
371001



1x
366601



1x
4508408



2x
4504382



2x
379426



1x
302226



4x
614126



1x
6021504



1x
303426



1x
4180536



1x
4180508



2x
4632571



1x
4277932



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



6037713 / 6037714

LEGO.com



LEGO and the LEGO logo are trademarks of the/son des marques de commerce de/son marcas registradas de LEGO Group. ©2013 The LEGO Group.