



CREATOR

 
31028



LEGO.com/creator




1

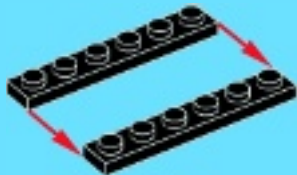

2

 2

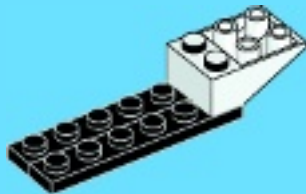

3



4



1

 


2




2x


5


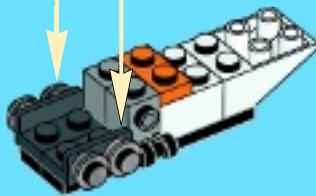


6

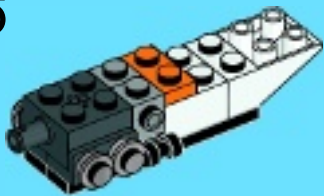 

7

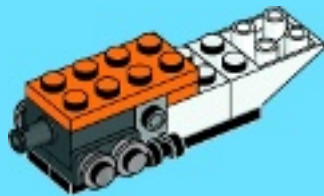 


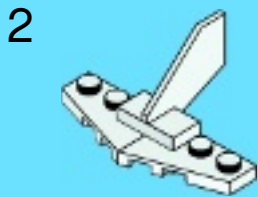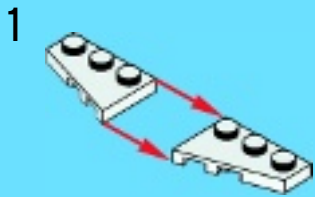  

4



 
8

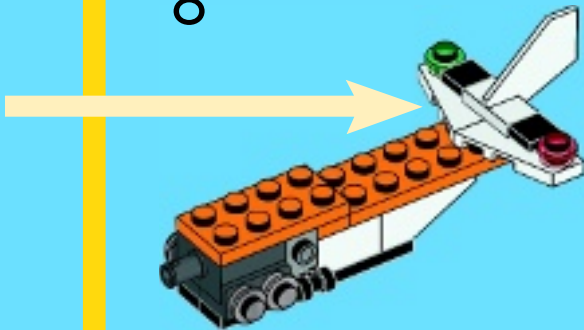

9



 10

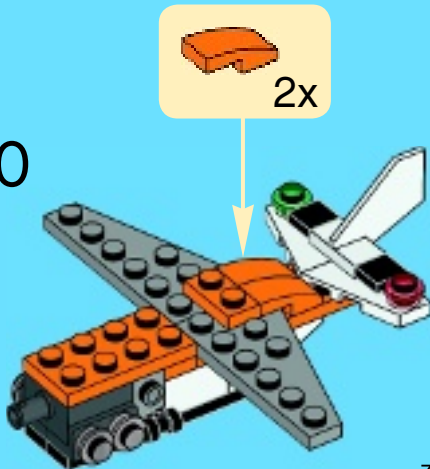

11



12

 


13






1

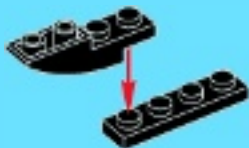

2

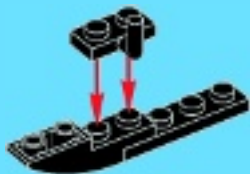 


3



4



 1

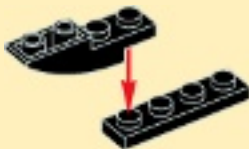

2



3



5



6

 


14







1

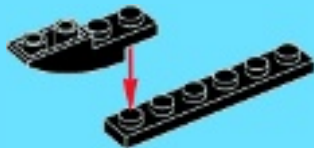

2

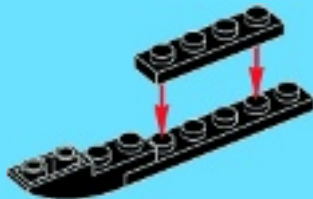 

3

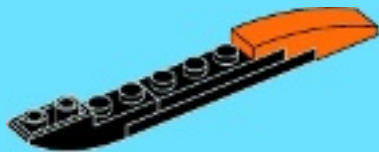 


4




1



 2

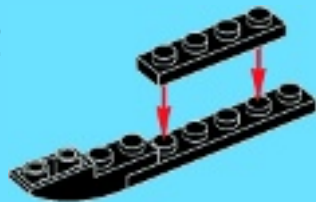

3

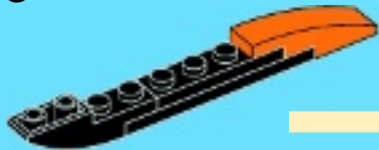 

5



1



2



6

 




1



2

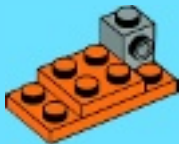

3



4



5



6



7



 
1



2



3

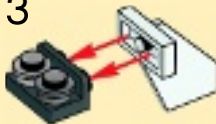


8





 1

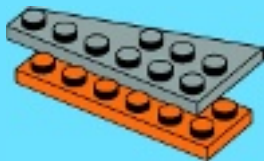

2



 
3




4



5

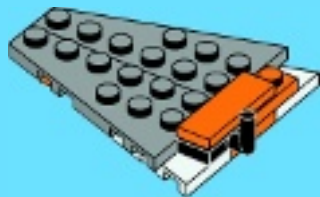

9

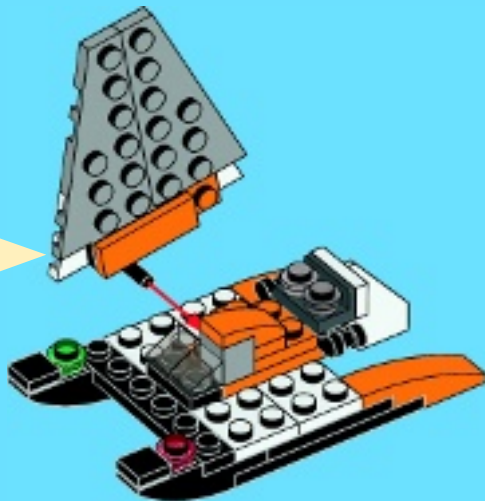 



1



 
2



3




4

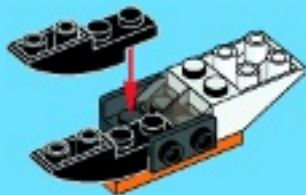

5



 6

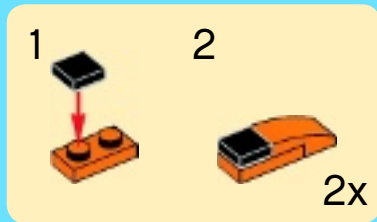



1



 
2



3



4

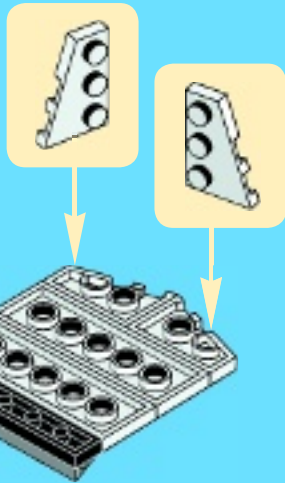


5



7



 1

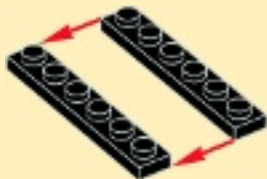

2



 
8



9



10

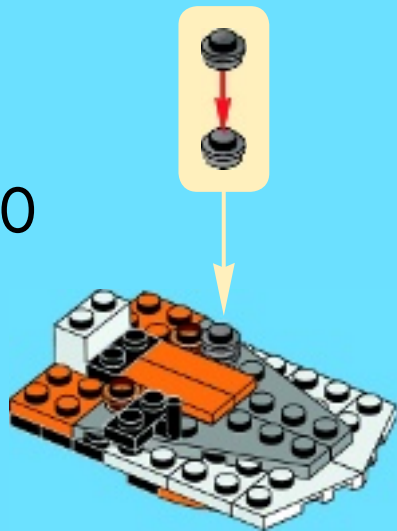

11



 
12




13



14

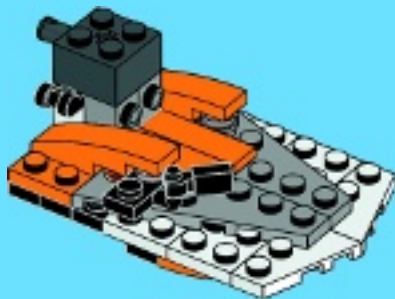

15

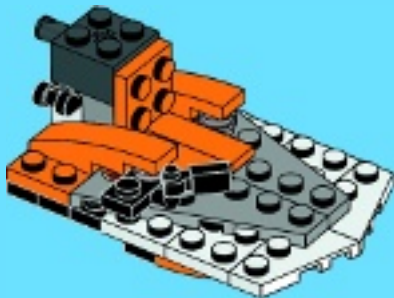 

16





2x
300401



1x
4500469



2x
379501



1x
4179874



1x
4179875



1x
4288960



1x
6099483



2x
307026



2x
302326



2x
371026



3x
366626



2x
4569733



2x
6039869



1x
4599984



2x
6015891



1x
3005741



1x
3005748



2x
6055069



2x
6037750



2x
4177932



1x
4159007



2x
4620693



1x
4158355



1x
4121741



2x
4244368



2x
4222960



2x
4558953



1x
4282789



1x
4282786



1x
4211046



2x
6000606



4x
4633691



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :

