



CREATOR

31029

 


LEGO.com/creator



2x

1

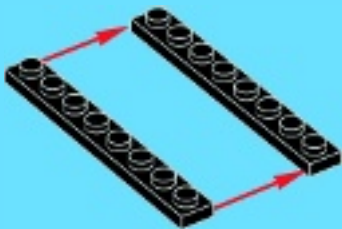

2



 
2x

2



2x


3

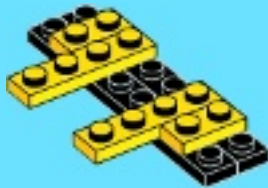



4x

 4

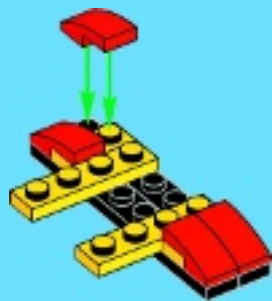

2x

5





1x



1x

 
 
6




1x

7



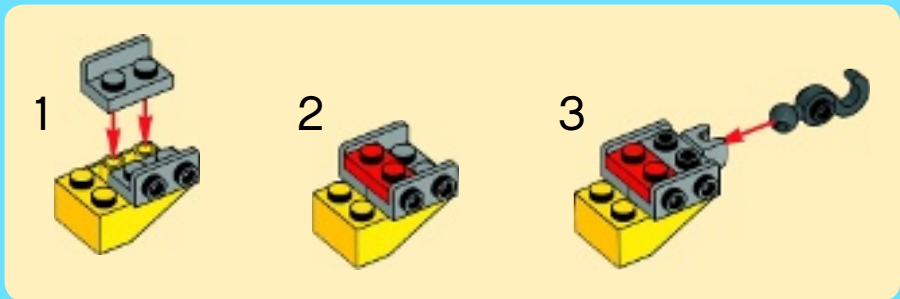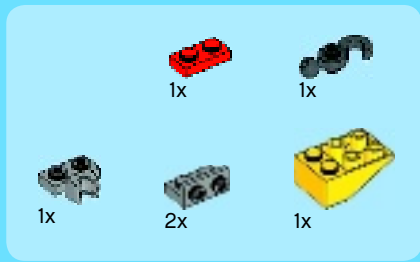

8

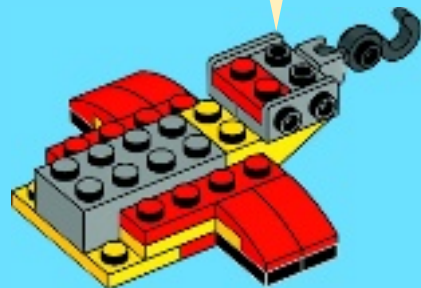 



1x



2x

9





4x

 


2x

10



2x

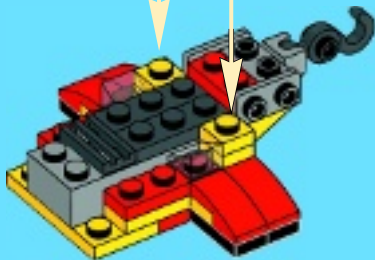

4x

 


2x

11



2x

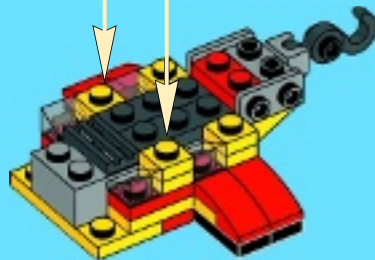




1x



1x

12

 1

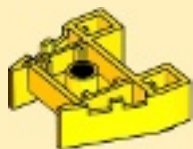

2





2x



2x

13



2x





1x



1x

14



10



2x

15





2x

16



2x

1x

17





2x



1x

18



12



1x

19





1x

1



1x

2



3

1x

 
 


4

1x




1x

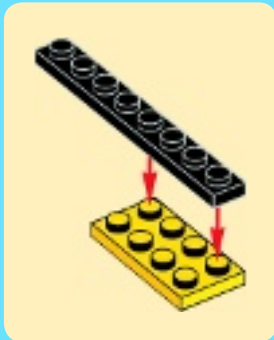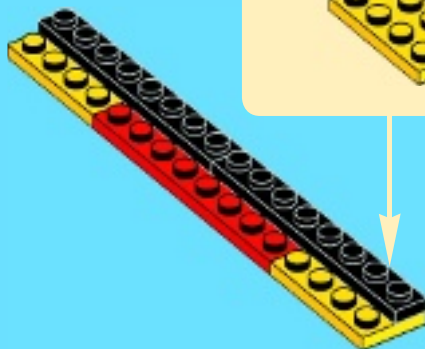




2x

 5

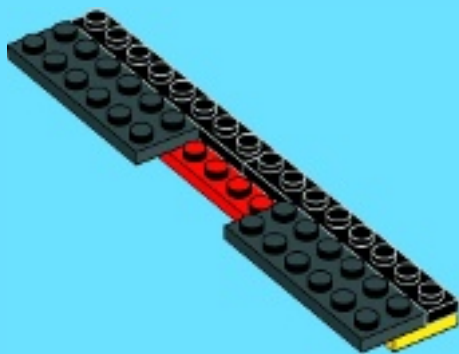

2x

 6

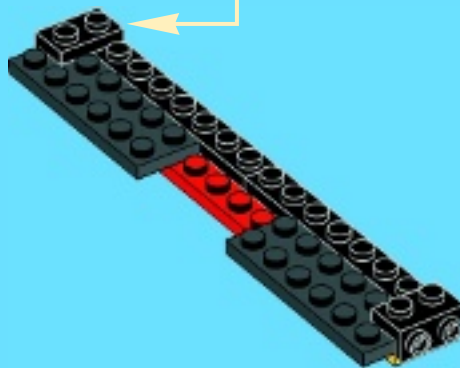



2x

7



16

 


1x



1x

8

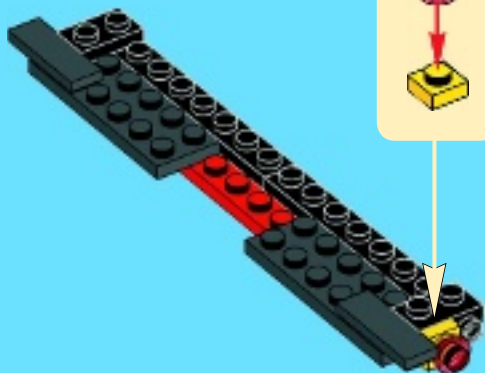




1x




1x

 9

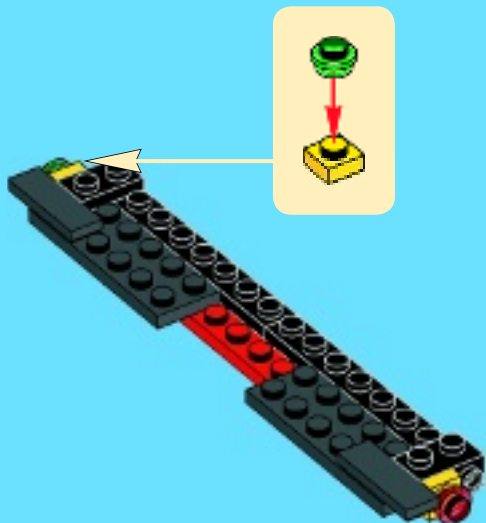

2x

 10

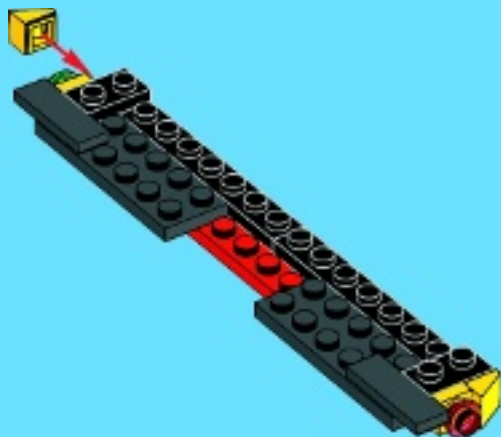



2x



1x

20





3x

 


3x




3x

21

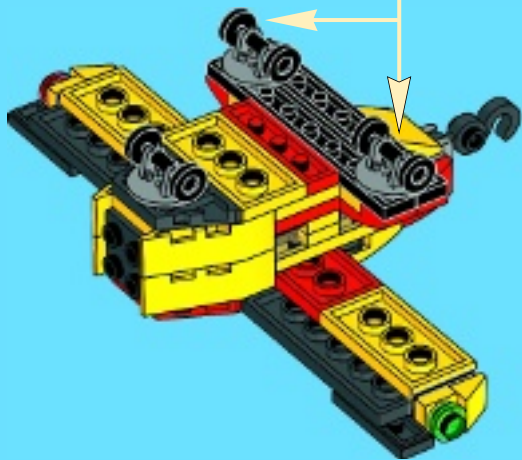

1x

 1

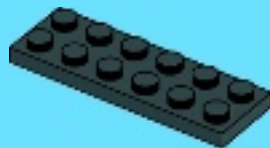



1x

2

 


1x



1x

3

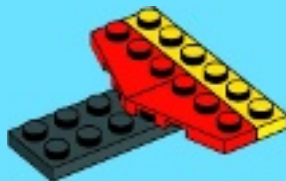



1x



 
2x

4



1x

5

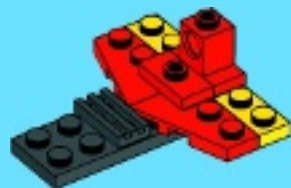



1x



1x

6



 
1x

7





22

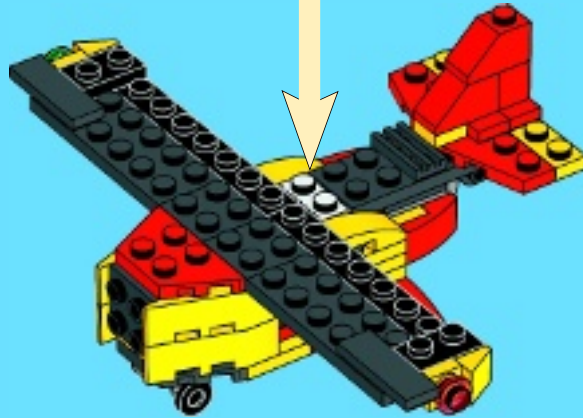



2x

23





2x



2x

24



1x

25



 


1x



1x

26

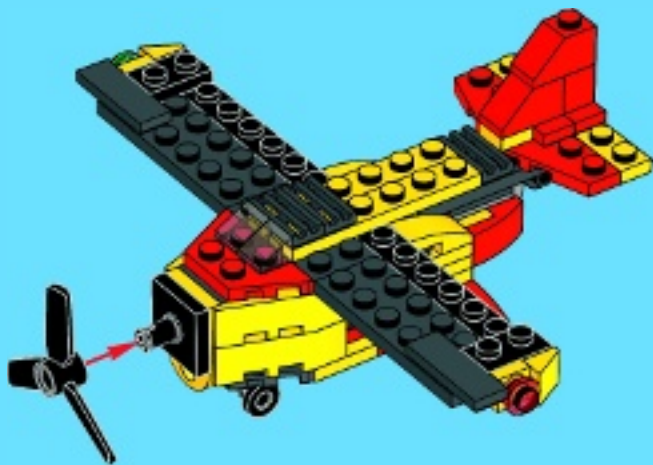



1x



1x



1x



1x



2x

27

 
1



2



3

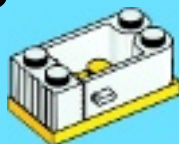

4



5

